

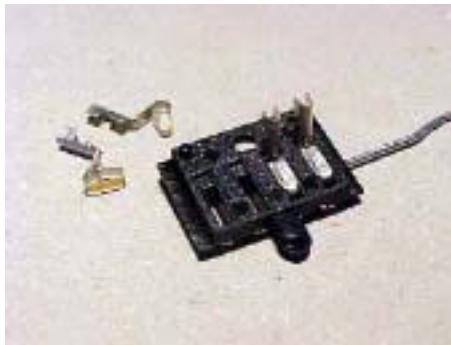



Assembly of Pfranc ePlug

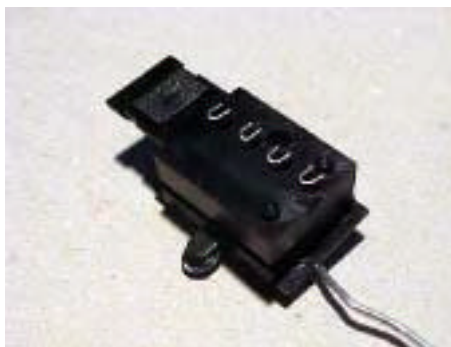

- Bend contacts 90°
- Install contacts and secure using paperclip

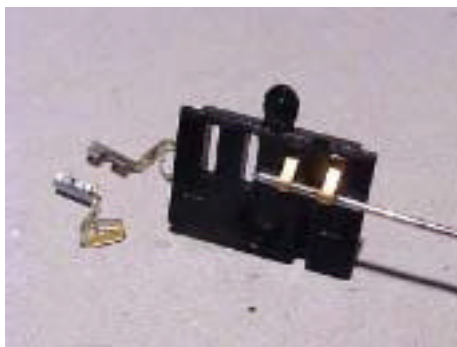

- Use a drop of plastic glue when available
- Install intermediate plug section
- Remove paperclip



- Remove tang (arrow) for gps type eMap
- Cut wires at different length
 - = 5 and Mass
 - T = 2
 - R = 3
 - + = power 3 VDC



- Solder wires to contacts using low power solder iron
- Use a drop of plastic glue when available
- Install plug cap over intermediate section
- Slide ePlug in slots of gps carefully

Note: ePlug fit in eTrex will be tight the first few times